


## SET-UP DATA

Tractive recommendations:	Spring preload	:13	mm
	Rebound damping	:10	clicks
	Compression LS	:10	clicks (top)
	Compression HS	:10	clicks



Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.

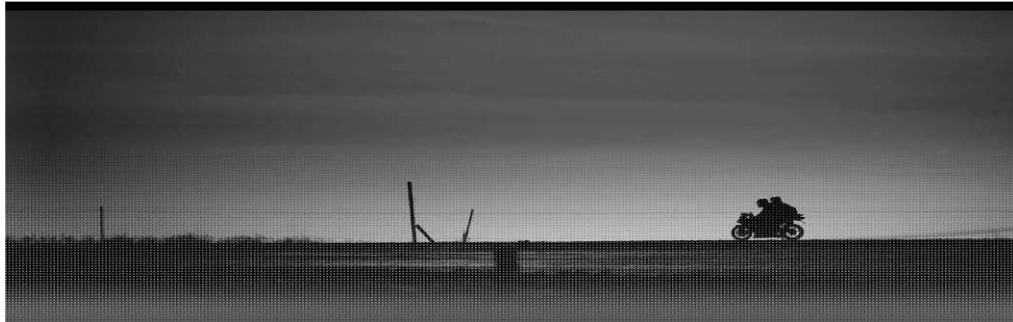

## Mounting Instructions

Model : BMW R1200 GS 2004 – 2012 REAR  
: BMW R1200 GS ADV 2006 – 2013 REAR

Contents:	:Part no.	Pcs.
	:46BM04-T5304-TR	
	:46BM06-T5319-TR	
	:Tractive sticker	2
	:Owner's manual	1
	:	
	:	
	:	



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



**Before installing this product, read the Tractive Owner's manual!**

## HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the seat, exhaust and rear wheel.
- 3) Remove the upper and lower attachments of the original shock absorber and remove it.
- 4) Install the Tractive shock absorber and tighten the upper and lower attachments.



Make sure that all screws are tightened to the correct torque.

- 5) Reattach the seat. Make sure that all parts are installed in the same way as they were before the installation.

