


SET-UP DATA

Tractive recommendations: Spring preload :20 mm
Rebound damping :10 clicks

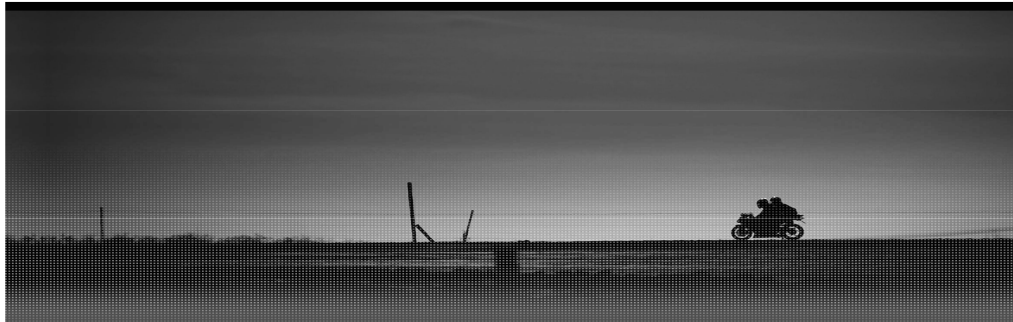

Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.



Mounting Instructions

Model : BMW R1100 GS 1994-

Contents	:Part no.	Pcs.
	:46BM94-R3501	1
	:90100001	1
	:Tractive sticker	2
	:Owner's manual	1
	:PA Bracket	1
	:Bolt M6x30	2
	:Spacer (nylon)	2



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



Before installing this product, read the Tractive Owner's manual!

HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the seat and rear wheel
- 3) Remove the upper and lower attachments of the original shock absorber and remove it.
- 4) Install the Tractive shock absorber and tighten the upper and lower attachments. The bolt for the lower attachment is delivered with the Tractive shock.



Make sure that all screws are tightened to the correct torque.

- 5) Bolt the preload adjuster knob on the frame as shown in the picture.
- 6) Re-attach the seat and rear wheel. Make sure that all parts are installed in the same way as they were before the installation.

