


SET-UP DATA

Tractive recommendations:	Spring preload	:16	mm
	Rebound damping	:10	clicks
	Compression LS	:10	clicks
	Compression HS	:10	clicks

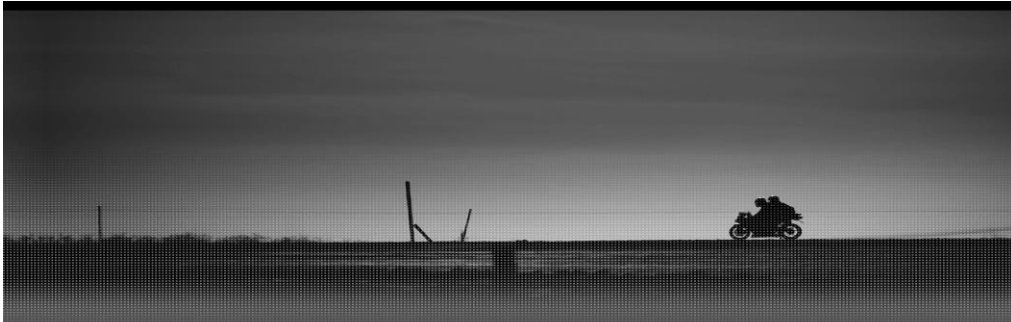

Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.



Mounting Instructions

Model : HONDA XRV 750 AFRICA TWIN (RD07) 1993-

Contents	:Part no.	Pcs.
	:46HO93-T6502	1
	Or 46HO93-R3102	1
	:46000268	1
	:90100001	1
	:Tractive sticker	2
	:Owner's manual	1
	:Ty-rap	1
	:	
	:	



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the seat.
- 3) Remove the upper and lower attachments of the original shock absorber and remove it.
- 4) Install the Tractive shock absorber and tighten the upper and lower attachments. The bolt for the lower attachment is delivered with the Tractive shock.



Make sure that all screws are tightened to the correct torque.

- 5) Mount the reservoir (only with model with high end low speed adjuster) on the original bracket.
- 6) Bolt the PA knob on the frame as shown in the picture.
- 7) Secure the hose with a ty-rap.
- 8) Reattach the seat. Make sure that all parts are installed in the same way as they were before the installation.

