


SET-UP DATA

Tractive recommendations:	Spring preload	:16	mm
	Rebound damping	:10	clicks
	Compression LS	:10	clicks
	Compression HS	:10	clicks



Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.

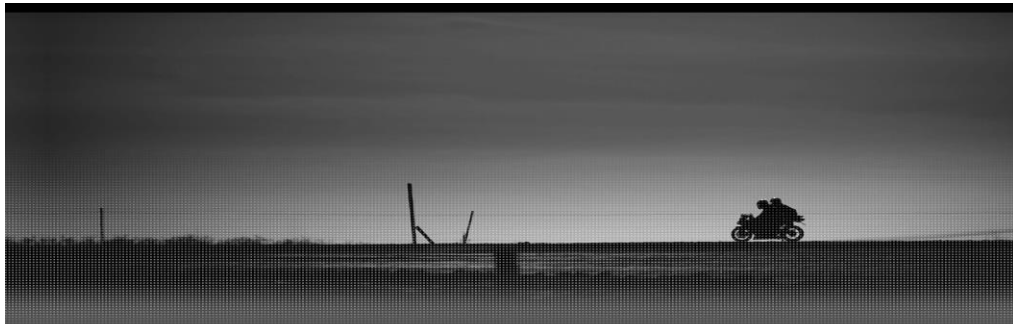

Mounting Instructions

Model : HONDA XRV 750 AFRICA TWIN (RD07) 1993-

Contents	:Part no.	Pcs.
	:46HO93-T6502	1
	Or 46HO93-R3102	1
	:46000268	1
	:90100001	1
	:Tractive sticker	2
	:Owner's manual	1
	:Ty-rap	1
	:	
	:	



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



