


SET-UP DATA

Tractive recommendations:	Spring preload	:20	mm
	Rebound damping	:10	clicks
	Compression LS	:10	clicks (top)
	Compression HS	:10	clicks



Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.

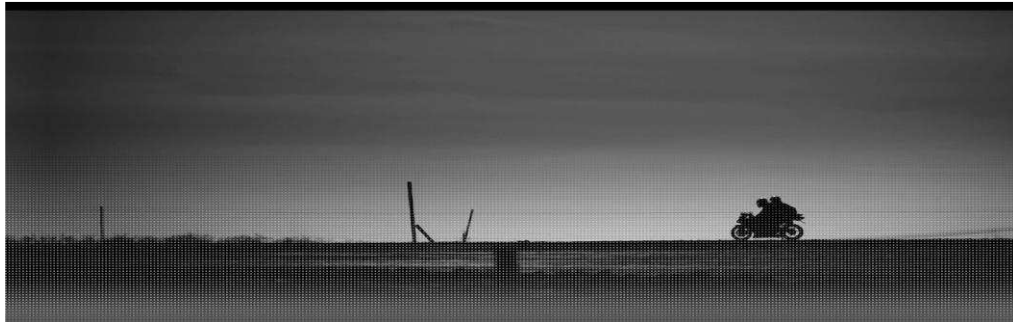

Mounting Instructions

Model : KTM 690 ENDURO RALLY 08- (300)

Contents:

:Part no.	Pcs.
:46KT08-T9106/X01	1
:90100001	1
:Tractive sticker	2
:Owner's manual	1
:	
:	
:	



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



Before installing this product, read the Tractive Owner's manual!

HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the seat.
- 3) Remove the lower bolts from the subframe and rotate it around the upper attachments.
- 4) Remove the upper and lower attachments of the original shock absorber and remove it.
- 5) Install the Tractive shock absorber and tighten the upper and lower attachments.



Make sure that all screws are tightened to the correct torque.

- 6) Rotate the subframe back and secure the lower bolts.
- 7) Reattach the seat. Make sure that all parts are installed in the same way as they were before the installation.

