


## SET-UP DATA

Tractive recommendations:	Spring preload	:26	mm
	Rebound damping	:8	clicks
	Compression LS	:9	clicks
	Compression HS	:9	clicks



Read more about how to set up the vehicle and how to adjust the adjusters correctly in the owner's manual.

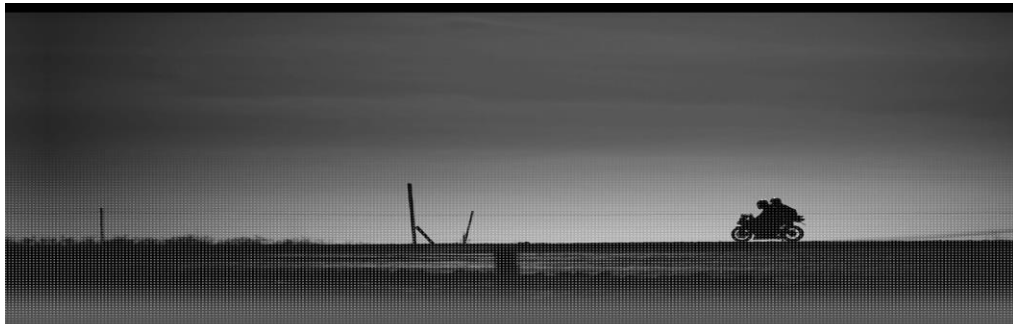

## Mounting Instructions

Model : TRIUMPH 1200 EXPLORER 2012-

Contents	:Part no.	Pcs.
	:46TR12-T6303	1
	:90100001	1
	:Tractive sticker	2
	:Owner's manual	1
	:Ty-rap	2
	:Rubber reservoir strap	2
	:Collar band	2



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



**Before installing this product, read the owner's manual!**

## HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the seat, exhaust and wheel
- 3) Remove the upper and lower attachments of the original shock absorber and remove it.
- 4) Install the Tractive shock absorber and tighten the upper and lower attachments.



Make sure that all screws are tightened to the correct torque.

- 5) Mount the reservoir as shown on the picture with 2 collar bands  
**Tighten torque: 4 Nm.**
- 6) Make sure that all parts are installed in the same way as they were before the installation.

