


SET-UP DATA

Tractive recommendations: Spring preload :10 mm
Rebound damping : 12 clicks

This set-up is for riders 65 – 75kg
Rider from 75 – 90 use 1 step harder spring
Rebound damping :10 clicks



Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.

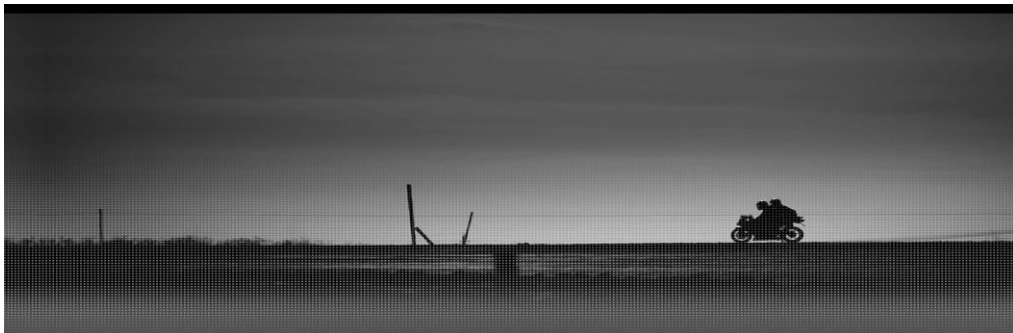

Mounting Instructions

Model : YAMAHA MT-07 (FZ-07) 2014-

Contents	:Part no.	Pcs.
	:46YA14-R3116-TR	1
	:90100001	1
	:Tractive sticker	2
	:Owner's manual	1
	:Hex.bolt M10x60	1
	:Nut lock M10	1
	:Washer 10.5 x30x2.5	2
	:Washer M10	2



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



Before installing this product, read the Tractive Owner's manual!

HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the chain and mounting fork cover
- 3) Remove the shock absorber bolts and take the shock out.
- 4) Mount the TT-Tractive shock with the rebound adjuster on the left (chain) side of the bike
- 5) Use the delivered longer bolt.
- 6) Order – bolt – washer M10- mounting fork – washers inside – washer – locknut to mount the lower end of the shock.

