


SET-UP DATA

Tractive recommendations: Spring preload :10 mm
Rebound damping : 12 clicks

This set-up is for riders 65 – 75kg
Rider from 75 – 90 use 1 step harder spring
Rebound damping :10 clicks



Read more about how to set up the vehicle and how to adjust the adjusters correctly in the Tractive Owner's manual.

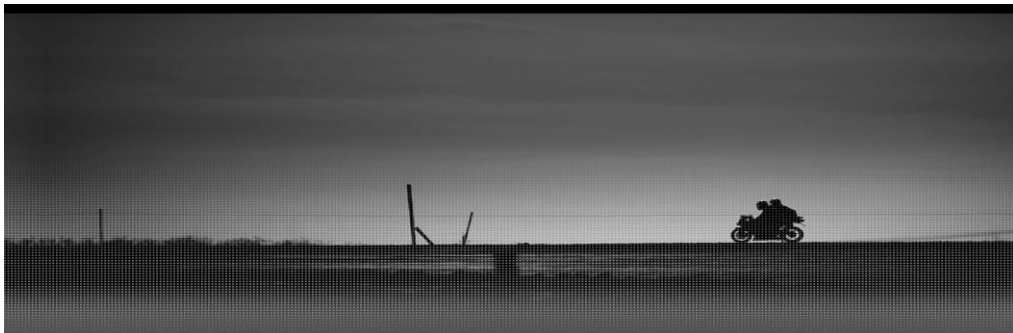

Mounting Instructions

Model : YAMAHA MT-07 (FZ-07) 2014-

Contents	:Part no.	Pcs.
	:46YA14-R3516-TR	1
	:90100001	1
	:Tractive sticker	2
	:Owner's manual	1
	:PA Bracket	1
	:Bolt M6x20	2
	:Bolt M8x30	2
	:Washer M8	2
	:Hex.bolt M10x60	1
	:Nut lock M10	1
	:Washer 10.5 x30x2.5	2
	:Washer M10	2



Before installing this product, check the contents of the kit listed above. If anything is missing, please contact your Tractive dealer.



Before installing this product, read the Tractive Owner's manual!

HOW TO INSTALL

- 1) Put the motorcycle on a workstand so that the rear wheel is off the ground.



Make sure the vehicle is secured so it will not tip

- 2) Remove the chain and mounting fork cover
- 3) Remove the shock absorber bolts and take the shock out.
- 4) Stick the orange preload adjuster knob through the hole shown on the picture.
- 5) Mount the TT-Tractive shock with the hose on the left side of the bike
- 6) Use the delivered longer bolt. Order – bolt – washer M10- mounting fork – washers inside – washer – locknut to mount the lower end of the shock. Rebound clicker on the left (chain) side.



7) Mount the preload knob under the passenger foot bracket with the 2 delivered M8 bolts with washer M8

8) Check if the preload adjuster hose is not mounted under tension and that it cannot touch the white spring.

9) The set-up is for single use out of the box.

10) Use the preload adjuster when riding with luggage. Add for example 20 clicks – Riding with passenger add approx. 40 clicks.

